

Front Cover Replacement in Three Phase StorEdge Inverters

Kit Contents


- Front cover

Required Tools


- 5mm hex key

Replacing the Inverter Cover

1. Switch the inverter ON/OFF/P switch to OFF. Wait 5 minutes for the capacitors to discharge.

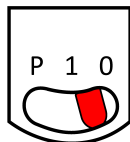

2. Disconnect the AC to the inverter by turning OFF the circuit breakers on the distribution panel.
3. Open the Allen screws of the inverter cover and carefully pull the cover horizontally before lowering it.

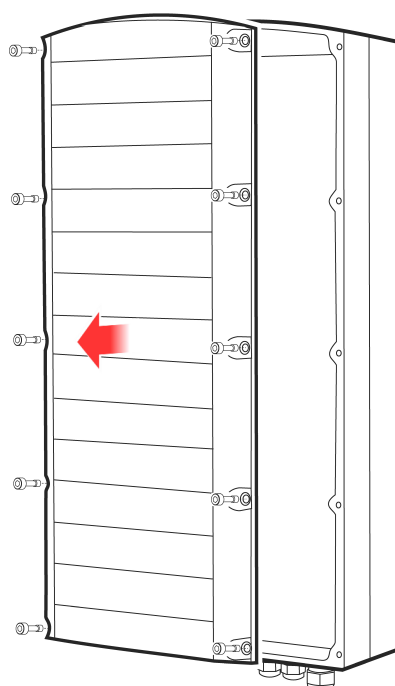

CAUTION!



When removing the inverter cover, make sure not to damage the internal components. SolarEdge will not be held responsible for any components damaged as a result of incautious cover removal.

4. Place the new inverter cover on the inverter and fasten it with the Allen screws. Apply a torque of 8.4N*m (74 lb*in).