

Replacement of AC Panel in Three Phase Inverters with Synergy Technology for North America and Australia

This guide explains how to replace the AC Panel in the Three Phase Inverter with Synergy Technology.

Revision History

Version 1.0 (October, 2021)

Kit Contents

- Replacement AC Panel

Required Tools

- 4 mm Allen torque wrench
- Torque Phillips screwdriver
- 3 mm flat head screwdriver

Removing the Synergy Manager Cover

→ To remove the Synergy Manager cover

1. Switch the ON/OFF/P switch of the Synergy Manager to OFF and wait 5 minutes for the internal capacitors to discharge.

WARNING!



The Synergy Manager cover should be opened only after switching the inverter ON/OFF/P switch located at the bottom of the Synergy Manager to OFF. This disables the DC Voltage inside the inverter. Wait five minutes before opening the cover. Otherwise, there is a risk of electric shock from energy stored in the capacitors.

AVERTISSEMENT!

Ne pas ouvrir le couvercle de l'onduleur avant d'avoir coupé l'interrupteur situé en dessous de l'onduleur. Cela supprime les tensions CC et CA de l'onduleur. Attendre cinq minutes avant d'ouvrir le couvercle. Sinon, il y a un risque de choc électrique provenant de l'énergie stockée dans le condensateur

2. Turn-off the DC Disconnect Switch on the front cover of the Synergy Manager (only applicable for models with DC Disconnect Switch).
3. Disconnect AC to the inverter by turning-off the inverter circuit breakers on the distribution panel.
4. Remove the six Allen screws on the front cover of the Synergy Manager and remove the cover.

CAUTION!



When removing the front cover, make sure not to damage the internal components. SolarEdge will not be held responsible for any components damaged as a result of incautious cover removal.

Removing the AC Panel

→ To remove the AC panel:

1. Remove the six screws securing the AC panel and remove the panel. Verify that the O-ring sits properly in the groove of the Manager Unit housing.

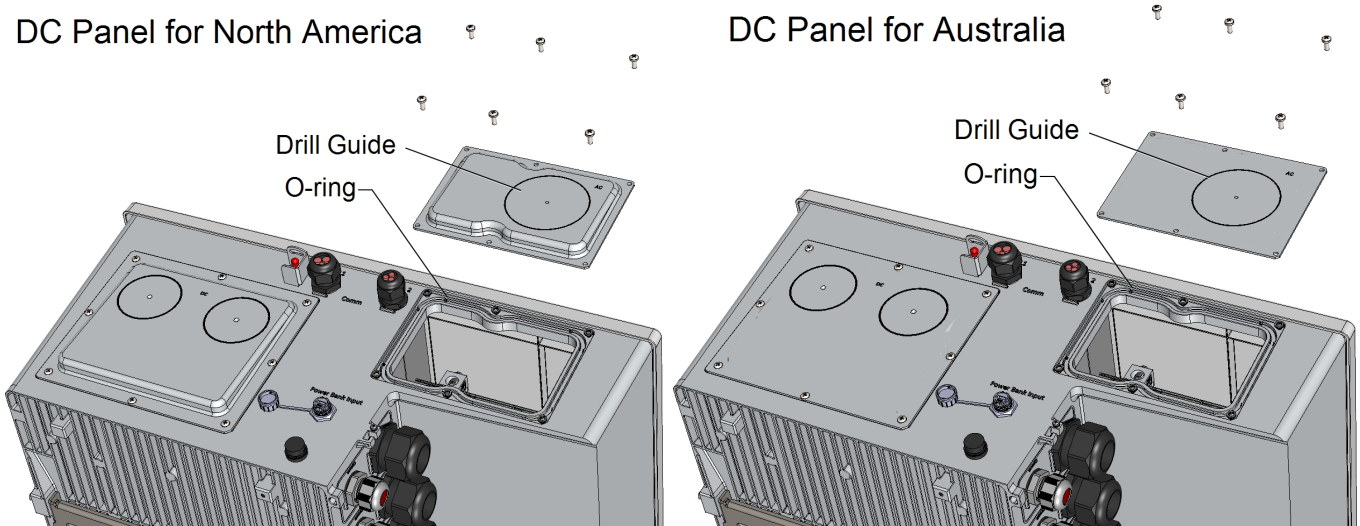


Figure 1: Removing the AC panel from the bottom of the Manager Unit

Drilling Entry Holes for a Conduit on the Replacement AC Panel

→ To drill an entry hole for a conduit on the replacement AC panel:

1. Locate the drill guide on the AC panel and drill an entry hole for a conduit with a maximum diameter of 63 mm (2.5" for North America).

CAUTION!



To avoid damage to the internal part of the Synergy Manager, always remove the AC panel from Manager Unit before drilling holes.

Installing the Replacement AC Panel

→ To install the replacement AC panel:

1. Position the AC panel and tighten the six screws connecting the panel to the Manager Unit with a torque of 1.9 N*m (1.4 lb*ft).
2. Close the Synergy Manager cover and fasten the six Allen screws with a torque of 3.5 N*m (2.6 lb*ft).

Support Contact Information

If you have technical problem concerning SolarEdge product, please contact us at:

<https://www.solaredge.com/service/support>

<https://www.solaredge.com/us/service/support>

Before contacting, make sure to have the following information at hand:

- Model and serial number of the product in question.
- The error indicated on the product SetApp mobile application, LCD screen, indication LEDs or in the monitoring platform (if available).
- System configuration information, including the type and number of modules connected and the number and length of strings.
- The communication method to the SolarEdge server (if available).
- The product's software version as it appears in the ID status screen of the LCD or SetApp mobile application.